



Compressed Air Tips

- > Fix compressed air leaks at joints, valves, fittings and hose connections.
- Replace clogged compressed air filters.
-) Check that the system isn't using higher pressure than needed.





